


BEFORE MEASURING MAKE SURE FLAP IS AT THE TOP OF YOUR DESK.


VERTICAL WINDOW When measuring windows for all envelopes commecials or catalogs. START WITH THE FLAP LOCATED AT THE TOP. Measure the WINDOW SIZE. Measure distance from BOTTOM of envelope to BOTTOM of window. Measure the distance from the LEFT EDGE of envelope to the LEFT EDGE of the window.

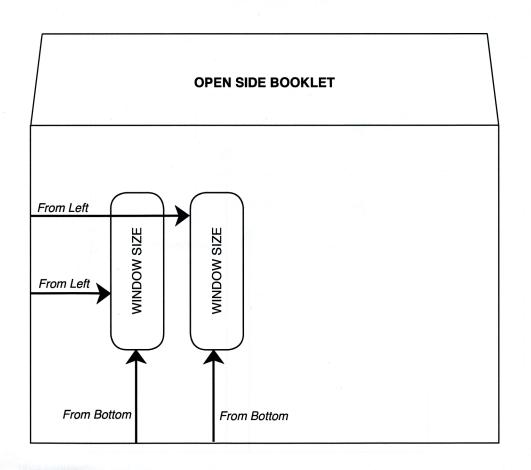


HORIZONTAL WINDOW

When measuring windows for all envelopes commecials or catalogs. START WITH THE FLAP LOCATED AT THE TOP.

- Measure the WINDOW SIZE.
- 2 Measure distance from BOTTOM of envelope to BOTTOM of window.
- Measure the distance from the LEFT EDGE of envelope to the LEFT EDGE of the window.

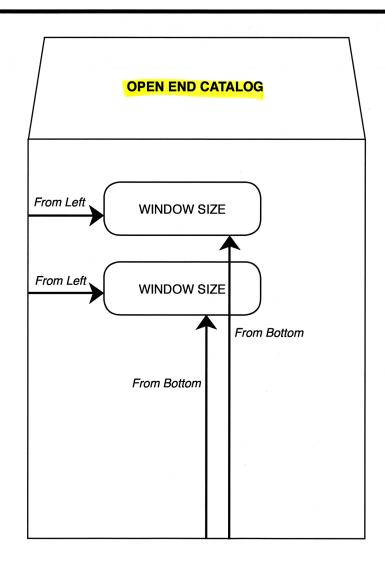

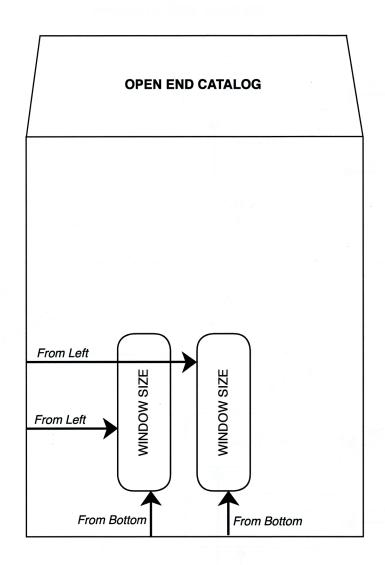

BEFORE MEASURING MAKE SURE FLAP
IS AT THE TOP OF YOUR DESK.